

BWS-50 Multi Feed Blade Removal Instructions:



1. Take BWS-50 apart and remove the blade rolls from the machine.
2. Remove the nut end wall panels as shown in above diagram.
3. Remove nut from blade roll as shown in above diagram.
4. Remove the blades and spacers. Install new blades.

Be careful to make sure blade roll spacers are put back on in the same manner you removed them.